

PLEASE READ AND FOLLOW ALL WARNINGS



UT8765

5" HI-SPEED ANGLE SANDER

Read Operating Instructions

Always become familiar with all the instructions and warnings before operating any power tool.



Always Wear Approved Eye Protection

Impact resistant eye protection should meet or exceed the standards as set forth in the United States ANSI Z87.1, Occupational and Educational Eye and Face Protection. Look for the marking Z87.1 on your eye protection to insure that it is an approved style. For further information, ANSI Z87.1, Occupational and Educational Eye and Face Protection, is available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.



Hearing Protection is Recommended

Hearing protection should be used when the noise level exposure equals or exceeds an 8 hour time-weighted average sound level of 85 dBA. Process noise, reflective surfaces, other tools being operated nearby, all add to the noise level present in your work area. If you are unable to determine your noise level exposure, we recommend the use of hearing protection.



Avoid Prolonged Exposure to Vibration

Tools can vibrate during use. Prolonged exposure to vibration or very repetitive hand and arm movements, can cause injury. Stop using any tool if discomfort, tingling feeling or pain occurs. You should consult your physician before resuming use of the tool.



90 PSIG Maximum

This tool is designed to operate at


an air pressure of 90 pounds per square inch gauge pressure (90 PSIG) maximum, at the tool. Use of higher air pressure can, and may cause injury. Also, the use of higher air pressure places the internal components under loads and stresses they were not designed for, causing premature failure. The air supply should be clean and dry, preferably lubricated. For best results, drain the moisture from your compressor daily.

WARNING:

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as those dust masks that are specially designed to filter out microscopic particles.

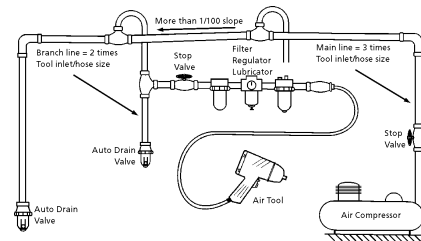

Description

Universal Tool 5" Hi-Speed Angle Sander features a muffled rear exhaust and built-in regulator. This lightweight tool has a low profile head and removable dead handle for hard-to-reach locations. Just right for touch-up and medium-production sanding in a variety of applications.



Safety Instructions

The following instructions are furnished as general guidelines for use of your pneumatic tool. They cannot comprehensively cover all possible or conceivable uses of the subject tool. For additional information on the safe use of air tools, we advise you to obtain a copy of ANSI B186.1 Safety Code for Portable Air Tools, available from the following source:

American National Standards Institute, Inc.

11 West 42nd Street
New York, NY 10036.

The use of the word "shall" in the following instructions, indicates that adherence to the particular requirement is necessary to conform to ANSI B186.1.

Tool Application and Usage

Portable tools shall be used only for the purposes intended in their design and within the capacity for which they were intended and rated. It shall be the tool owner's and/or employer's responsibility to instruct each operator in the safe use of the tool. Tools shall not be used without guards and safety

devices as furnished by the manufacturer. Where an air tool is modified or altered, the modifier shall provide the safeguards to enable it to be safely used in the operations intended and to comply with any applicable provisions as contained in ANSI B186.1.

Tool Installation

Pressure regulators shall be used to limit air pressure to the rated pressure where the supply pressure exceeds the tool's rated pressure. Air hoses and lines shall be relieved of compressed air before being disconnected or disjoined, unless there is automatic valve closing protection at the joint being separated. Synthetic lubricants which can cause deterioration of elastomer seals shall not be used in air systems of air tools.

Tool Maintenance

It shall be the tool owner's and/or employer's responsibility to assure that tools are maintained in a safe operating condition. Tool maintenance and repair shall be performed by authorized, trained, competent personnel. Tools shall be disconnected from their compressed air supply before repairs are attempted. Repairs shall be consistent with the manufacturer's recommended procedures. Tool, hoses and fittings shall be replaced if unsuitable for safe operation. It shall be the tool owner's and/or employer's responsibility to keep required rating markings and warnings on the tool in legible condition.

Universal Tool
A Division of Florida Pneumatic Manufacturing Corporation
851 Jupiter Park Lane, Jupiter, Florida 33458
Toll Free 1-800-327-9403


Read these instructions carefully before attempting to install, operate or service this Florida Pneumatic product. Failure to comply with the instructions could result in personal injury and/or property damage! Retain these instructions for future reference.

FPMC

PL0322

Specifications

Spindle size.....	5/8" -11
Free speed.....	7,000 RPM
Weight.....	3 3/4 lbs.
Length.....	9 1/2"
Height.....	4"
Average air consumption.....	.6 CFM
Recommended hose size.....	3/8" I.D.
Air inlet.....	1/4" NPT

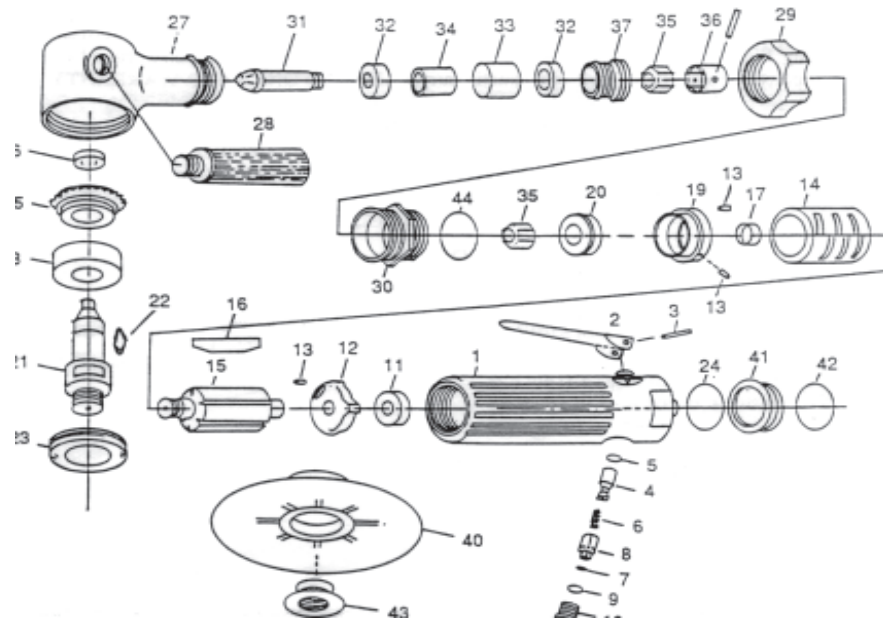Parts Breakdown for UT8765

Replacement Parts for UT8765

Ref.	Description	Part #	Ref.	Description	Part #
1	Motor Housing	8731752	25	Bevel Gear	8731769
2	Throttle Lever	8729264	26	Bearing	8729012
3	Lever Pin	8729167	27	Angle Housing	8731772
4	Valve Stem	8729259	28	Side Handle	8731773
5	O-Ring	81012370	29	Adapter Nut	8731774
6	Valve Spring	8729258	30	Threaded Adapter	8731775
7	O-Ring	8729088	31	Pinion Gear	8731776
8	Air Controller	8729282	32	Bearing (2)	8729020
9	O-Ring	8729073	33	Spacer Outside	8731779
10	Valve Spring	8729262	34	Spacer Inside	8731778
11	Ball Bearing	8731756	35	Hex Nut (2)	8731781
12	Rear End Plate	8731757	36	Drive Coupling	8731771
13	Cylinder Pin (3)	8729707	37	Lock Ring	8731780
14	Cylinder	8731759	*	Wrench	81010911
15	Rotor	8731760	*	Air Inlet	8732449
16	Rotor Blade (5)	8731761	40	Pad	8731783
17	Stop Ring	8729711	41	Rear Exhaust Shield	8729702
18	Ball Bearing	81005471	42	Snap Ring	8729703
19	Front End Plate	8731764	43	Pad Nut With Knurl	8731075
20	Bearing	8729113	44	O-Ring	8732238
21	Spindle	8731765	45	Roll Pin	8729296
22	Spindle Woodruff Key	8731766		*Not Shown.	
23	Lock Ring	8731767			
24	O-Ring	81012371			

Limited Warranty

Universal Tool warrants its tools to be free from defects in material and workmanship for one year from the date of purchase. This warranty does not apply to tools which have been abused, misused, modified or repaired by someone other than Universal Tool or its authorized service centers. If a Universal Tool proves defective in material of workmanship within one year after purchase, return it to any authorized service center or to Universal Tool, freight prepaid. Please enclose your name, address and adequate proof of purchase date with a brief description of the defect. Universal Tool will, at its option, repair or replace defective tools, free of charge. Repairs or replacements are warranted as described above for the remainder of the warranty period. Universal Tool's sole liability and your exclusive remedy under this warranty is limited to repair or replacement of the defective tool. There are no other warranties expressed or implied and Universal Tool shall not be liable for incidental, consequential or special damages, or any other damages, costs or expense of repair or replacement as described above.