

PLEASE READ AND FOLLOW ALL WARNINGS



UT8080P / UT8080Q

3/8" IMPACT/SCEWDRIVER WRENCH

Read Operating Instructions

Always become familiar with all the instructions and warnings before operating any power tool.

Always Wear Approved Eye Protection

Impact resistant eye protection should meet or exceed the standards as set forth in the United States ANSI Z87.1, Occupational and Educational Eye and Face Protection. Look for the marking Z87.1 on your eye protection to insure that it is an approved style. For further information, ANSI Z87.1, Occupational and Educational Eye and Face Protection, is available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.

Hearing Protection is Recommended

Hearing protection should be used when the noise level exposure equals or exceeds an 8 hour time-weighted average sound level of 85 dBA. Process noise, reflective surfaces, other tools being operated nearby, all add to the noise level present in your work area. If you are unable to determine your noise level exposure, we recommend the use of hearing protection.

Avoid Prolonged Exposure to Vibration

Tools can vibrate during use. Prolonged exposure to vibration or very repetitive hand and arm movements, can cause injury. Stop using any tool if discomfort, tingling feeling or pain occurs. You should consult your physician before resuming use of the tool.

90 PSIG Maximum

This tool is designed to operate at


an air pressure of 90 pounds per square inch gauge pressure (90 PSIG) maximum, at the tool. Use of higher air pressure can, and may cause injury. Also, the use of higher air pressure places the internal components under loads and stresses they were not designed for, causing premature failure. The air supply should be clean and dry, preferably lubricated. For best results, drain the moisture from your compressor daily.

WARNING:

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as those dust masks that are specially designed to filter out microscopic particles.

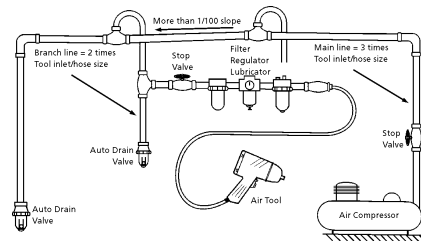

Description

Universal Tool 3/8" impact wrench and 1/4" screwdriver has optimum balance for reduced operator fatigue. Features a multi-position power regulator for controlled operation. Ideal for general assembly and maintenance operation.



Safety Instructions

The following instructions are furnished as general guidelines for use of your pneumatic tool. They cannot comprehensively cover all possible or conceivable uses of the subject tool. For additional information on the safe use of air tools, we advise you to obtain a copy of ANSI B186.1 Safety Code for Portable Air Tools, available from the following source:

American National Standards Institute, Inc.

11 West 42nd Street
New York, NY 10036.

The use of the word "shall" in the following instructions, indicates that adherence to the particular requirement is necessary to conform to ANSI B186.1.

Tool Application and Usage

Portable tools shall be used only for the purposes intended in their design and within the capacity for which they were intended and rated. It shall be the tool owner's and/or employer's responsibility to instruct each operator in the safe use of the tool. Tools shall not be used without guards and safety

devices as furnished by the manufacturer. Where an air tool is modified or altered, the modifier shall provide the safeguards to enable it to be safely used in the operations intended and to comply with any applicable provisions as contained in ANSI B186.1.

Tool Installation

Pressure regulators shall be used to limit air pressure to the rated pressure where the supply pressure exceeds the tool's rated pressure. Air hoses and lines shall be relieved of compressed air before being disconnected or disjoined, unless there is automatic valve closing protection at the joint being separated. Synthetic lubricants which can cause deterioration of elastomer seals shall not be used in air systems of air tools.

Tool Maintenance

It shall be the tool owner's and/or employer's responsibility to assure that tools are maintained in a safe operating condition. Tool maintenance and repair shall be performed by authorized, trained, competent personnel. Tools shall be disconnected from their compressed air supply before repairs are attempted. Repairs shall be consistent with the manufacturer's recommended procedures. Tool, hoses and fittings shall be replaced if unsuitable for safe operation. It shall be the tool owner's and/or employer's responsibility to keep required rating markings and warnings on the tool in legible condition.

Read these instructions carefully before attempting to install, operate or service this Florida Pneumatic product. Failure to comply with the instructions could result in personal injury and/or property damage! Retain these instructions for future reference.

FPMC

Universal Tool

A Division of Florida Pneumatic Manufacturing Corporation

851 Jupiter Park Lane, Jupiter, Florida 33458

Toll Free 1-800-327-9403



Drive size.....	1/4"
Free speed (No load).....	10,000 RPM
Blows per minute.....	1,700 IPM
Max Torque.....	75 Ft. Lbs. @ 90 psi
Weight.....	2-7/8 lbs.
Overall length.....	5 1/4"
Average air consumption.....	3 CFM
Recommended hose size.....	3/8" I.D.
Air inlet.....	1/4" NPT
Maximum operating pressure.....	90 psi

Parts Breakdown for UT8080P / UT8080Q
USE ONLY IMPACT SOCKETS & ACCESSORIES

Sockets and accessories used shall be of the impact socket type. Always check sockets, retainers and drives regularly for wear or damage and replace whenever necessary

Replacement Parts for UT8080P / UT8080Q

Ref.	Description	Part #	Ref.	Description	Part #
1	Motor Housing	9589001	31	Bit Retainer Sleeve	9589031
2	Air Inlet	9589002	32	Bit Washer	9589032
3	Throttle Valve	9589003	33	Bit Ring	9589033
4	Throttle Valve Bushing	9589004	34	Hook	9589034
5	Spring Spacer	9589005	35	Set Screw	9589035
6	Trigger	9589006	36	Set Screw	9589036
7	Control Valve	9589007	37	Pin	9589037
8	Control Valve Knob	9589008	38	Pin	9589038
9	Reverse Valve	9589009	39	Spring Pin	9589039
10	Reverse Valve Bushing	9589010	40	Spring Pin	9589040
11	Reverse Valve Lever	9589011	41	Spring Pin	9589041
12	Exhaust Deflector	9589012	42	Spring	9589042
13	Silencer	9589013	43	Spring	9589043
14	Filter	9589014	44	Spring	9589044
15	Rear Plate	9589015	45	Steel Ball	9589045
16	Cylinder	9589016	46	Steel Ball	9589046
17	Rotor	9589017	47	Ball Bearing	9589047
18	Blade (7)	9589018	48	Ball Bearing	9589048
19	Front Plate	9589019	49	O-Ring	9589049
20	Clutch Housing	9589020	50	O-Ring	9589050
21	Anvil Bushing	9589021	51	O-ring	9589051
22	Clutch Housing Adapter	9589022	52	O-Ring	9589052
23	Cam	9589023	53	O-Ring	9589053
24	Hammer Cage	9589024	54	O-Ring (2)	9589054
25	Hammer Dog	9589025	55	O-Ring	9589055
26	Anvil (QC)	9589026	56	Oil Seal	9589056
27	Hammer Cage Cap	9589027	57	Grip Sleeve	9589057
28	Bushing	9589028			
29	Thrust Plate	9589029			
30	Thrust Washer	9589030			

Limited Warranty

Universal Tool warrants its tools to be free from defects in material and workmanship for one year from the date of purchase. This warranty does not apply to tools which have been abused, misused, modified or repaired by someone other than Universal Tool or its authorized service centers. If a Universal Tool proves defective in material of workmanship within one year after purchase, return it to any authorized service center or to Universal Tool, freight prepaid. Please enclose your name, address and adequate proof of purchase date with a brief description of the defect. Universal Tool will, at its option, repair or replace defective tools, free of charge. Repairs or replacements are warranted as described above for the remainder of the warranty period. Universal Tool's sole liability and your exclusive remedy under this warranty is limited to repair or replacement of the defective tool. There are no other warranties expressed or implied and Universal Tool shall not be liable for incidental, consequential or special damages, or any other damages, costs or expense of repair or replacement as described above.

