

PLEASE READ AND FOLLOW ALL WARNINGS

Universal Tool

**UT8740-1
4" ANGLE GRINDER**

Read Operating Instructions

Always become familiar with all the instructions and warnings before operating any power tool.

Always Wear Approved Eye Protection

Impact resistant eye protection should meet or exceed the standards as set forth in the United States ANSI Z87.1, Occupational and Educational Eye and Face Protection. Look for the marking Z87.1 on your eye protection to insure that it is an approved style. For further information, ANSI Z87.1, Occupational and Educational Eye and Face Protection, is available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.

Hearing Protection is Recommended

Hearing protection should be used when the noise level exposure equals or exceeds an 8 hour time-weighted average sound level of 85 dBA. Process noise, reflective surfaces, other tools being operated nearby, all add to the noise level present in your work area. If you are unable to determine your noise level exposure, we recommend the use of hearing protection.

Avoid Prolonged Exposure to Vibration

Tools can vibrate during use. Prolonged exposure to vibration or very repetitive hand and arm movements, can cause injury. Stop using any tool if discomfort, tingling feeling or pain occurs. You should consult your physician before resuming use of the tool.

90 PSIG Maximum

This tool is designed to operate at


an air pressure of 90 pounds per square inch gauge pressure (90 PSIG) maximum, at the tool. Use of higher air pressure can, and may cause injury. Also, the use of higher air pressure places the internal components under loads and stresses they were not designed for, causing premature failure. The air supply should be clean and dry, preferably lubricated. For best results, drain the moisture from your compressor daily.

WARNING:

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as those dust masks that are specially designed to filter out microscopic particles.

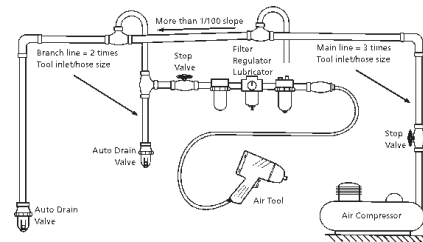

Description

Universal Tool 4" angle grinder is designed for a wide variety of grinding applications. The aluminum housing provides a lightweight and powerful package to reduce operator fatigue. This tool features a lock-off lever throttle to prevent accidental starts, and includes a side handle for increased control. Uses standard 4" diameter type 27 grinding wheels.



Safety Instructions

The following instructions are furnished as general guidelines for use of your pneumatic tool. They cannot comprehensively cover all possible or conceivable uses of the subject tool. For additional information on the safe use of air tools, we advise you to obtain a copy of CAGI B186.1-2009 Safety Code for Portable Air Tools, available from the following source: COMPRESSED AIR AND GAS INSTITUTE 1300 Sumner Avenue Cleveland, OH 44115-2851 Ph: 216-241-7333 www.cagi.org OR from Florida Pneumatic Manufacturing Corp. 851 Jupiter Park Lane Jupiter, FL 33458 561-744-9500 www.florida-pneumatic.com The use of the word "shall" in the following instructions, indicates that adherence to the particular requirement is necessary to conform to CAGI B186.1-2009.

Tool Application and Usage

Portable tools shall be used only for the purposes intended in their design and within the capacity for which they were intended and rated. It shall be the tool owner's and/or employer's responsibility to instruct each operator in the safe use of the tool. Tools shall not be used without guards and safety

devices as furnished by the manufacturer. Where an air tool is modified or altered, the modifier shall provide the safeguards to enable it to be safely used in the operations intended and to comply with any applicable provisions as contained in CAGI B186.1-2009.

Tool Installation

Pressure regulators shall be used to limit air pressure to the rated pressure where the supply pressure exceeds the tool's rated pressure. Air hoses and lines shall be relieved of compressed air before being disconnected or disjoined, unless there is automatic valve closing protection at the joint being separated. Synthetic lubricants which can cause deterioration of elastomer seals shall not be used in air systems of air tools.

Tool Maintenance

It shall be the tool owner's and/or employer's responsibility to assure that tools are maintained in a safe operating condition. Tool maintenance and repair shall be performed by authorized, trained, competent personnel. Tools shall be disconnected from their compressed air supply before repairs are attempted. Repairs shall be consistent with the manufacturer's recommended procedures. Tool, hoses and fittings shall be replaced if unsuitable for safe operation. It shall be the tool owner's and/or employer's responsibility to keep required rating markings and warnings on the tool in legible condition.



Universal Tool
A Division of Florida Pneumatic Manufacturing Corporation
851 Jupiter Park Lane, Jupiter, Florida 33458
Toll Free 1-800-327-9403

Read these instructions carefully before attempting to install, operate or service this Florida Pneumatic product. Failure to comply with the instructions could result in personal injury and/or property damage! Retain these instructions for future reference.


FPMC

Specifications

Wheel capacity.....	4" Type 27
Wheel size.....	4" X 1/4" X 5/8"
Spindle size.....	3/8" - 24
Free speed.....	11,000 RPM
Power output.....	3/4 HP
Weight.....	4 lbs.
Length.....	8"
Average air consumption.....	12 CFM
Recommended hose size.....	3/8" I.D.
Air inlet.....	1/4" NPT
Maximum air pressure.....	90 psi

Replacement Parts for UT2740-1

Ref.	Description	Part #	Ref.	Description	Part #
1	Motor Housing	9619010	29	Retaining Ring	9619035
2	Spring Pin	9619011	30	Bevel Gear	9619036
3	Air Inlet	9619012	31	Wave Washer	9619037
4	Throttle Lever	9619013	32	Ball Bearing	9BB-62022
5	Valve Stem	9619014	33	Spindle	9619038
6	Bushing	9619015	34	Key	9619039
7	O-Ring (2)	9619016	35	Gasket	9619040
8	Valve Spring	9619017	36	Retainer	9619041
9	Throttle Valve Housing	9619018	37	Disc Cover	9619042
10	Throttle Lever Plug	9619019	38	Flange	9619043
11	O-Ring	9619020	40	Flange Nut	9619044
12	Plunger	9619021	41	Adjust Screw	9619045
13	Ball Bearing (2)	9BB-6082	42	Adjust Nut	9619046
14	End Plate	9619022	43	Screw (4)	9619047
15	Rotor	9619023	44	Spring Washer (4)	9619048
16	Vanes (4)	9619024	45	Spring	9619049
17	Spring Pin	9619025	46	Governor	9619050
18	Cylinder	9619026	47	Pendulum (6)	9619051
19	Front End Plate	9619027	48	Spring Pin (2)	9619052
20	Ball Bearing	9BB-62012	49	O-Ring	9619053
21	Lock Nut	9619028	50	Torsion Spring	9619054
22	Bevel Gear	9619029	51	Throttle Lever Lock	9619055
23	Coupling Nut	9619030	52	Spring Pin	9619056
24	Screw (2)	9619031	53	Spanner	9619057
25	Deflector	9619032	54	Pin Wrench	9619058
26	Spacer	9619033	55	Handle	9619059
27	Screw	9619034	56	O-Ring	9619060
28	Ball Bearing	9BB-06262			

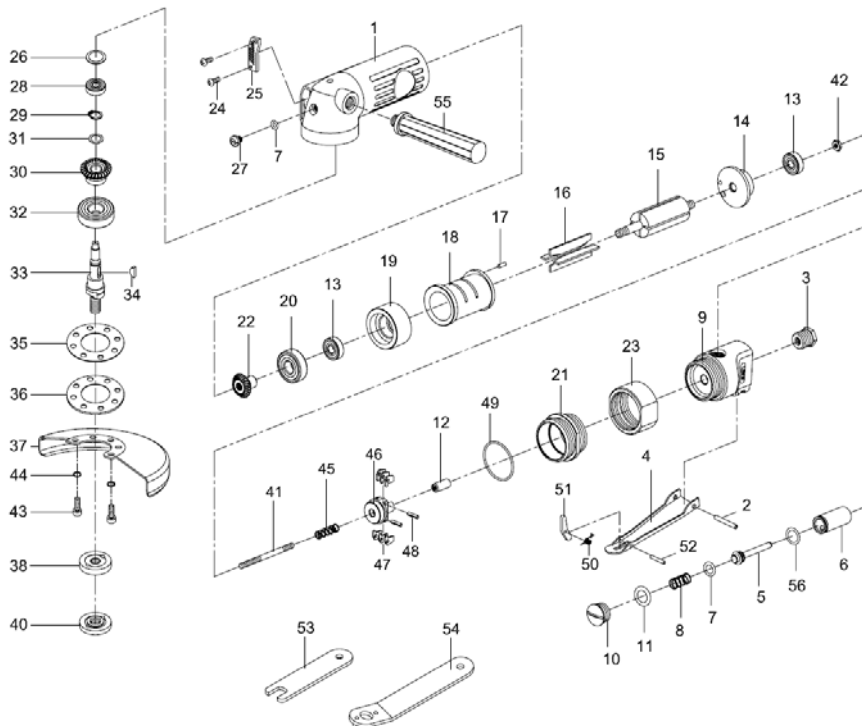

Limited Warranty

Universal Tool warrants its tools to be free from defects in material and workmanship for one year from the date of purchase. This warranty does not apply to tools which have been abused, misused, modified or repaired by someone other than Universal Tool or its authorized service centers. If a Universal Tool proves defective in material of workmanship within one year after purchase, return it to any authorized service center or to Universal Tool, freight prepaid. Please enclose your name, address and adequate proof of purchase date with a brief description of the defect. Universal Tool will, at its option, repair or replace defective tools, free of charge. Repairs or replacements are warranted as described above for the remainder of the warranty period. Universal Tool's sole liability and your exclusive remedy under this warranty is limited to repair or replacement of the defective tool. There are no other warranties expressed or implied and Universal Tool shall not be liable for incidental, consequential or special damages, or any other damages, costs or expense of repair or replacement as described above.