



PLEASE READ AND FOLLOW ALL WARNINGS



AIR TOOLS

FP866

BLOCK SANDER

Read Operating Instructions

Always become familiar with all the instructions and warnings before operating any power tool.



Always Wear Approved Eye Protection

Impact resistant eye protection should meet or exceed the standards as set forth in the United States ANSI Z87.1, Occupational and Educational Eye and Face Protection. Look for the marking Z87.1 on your eye protection to insure that it is an approved style. For further information, ANSI Z87.1, Occupational and Educational Eye and Face Protection, is available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.



Hearing Protection is Recommended

Hearing protection should be used when the noise level exposure equals or exceeds an 8 hour time-weighted average sound level of 85 dBA. Process noise, reflective surfaces, other tools being operated nearby, all add to the noise level present in your work area. If you are unable to determine your noise level exposure, we recommend the use of hearing protection.



Avoid Prolonged Exposure to Vibration

Tools can vibrate during use. Prolonged exposure to vibration or very repetitive hand and arm movements, can cause injury. Stop using any tool if discomfort, tingling feeling or pain occurs. You should consult your physician before resuming use of the tool.



90 PSIG Maximum

This tool is designed to operate at


an air pressure of 90 pounds per square inch gauge pressure (90 PSIG) maximum, at the tool. Use of higher air pressure can, and may cause injury. Also, the use of higher air pressure places the internal components under loads and stresses they were not designed for, causing premature failure. The air supply should be clean and dry, preferably lubricated. For best results, drain the moisture from your compressor daily.

WARNING:

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as those dust masks that are specially designed to filter out microscopic particles.

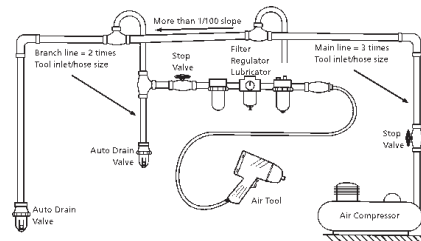

Description

Florida Pneumatic orbital sander is designed for medium duty applications such as sanding and finishing on a variety of surfaces including woods, metals and fiberglass. This tool features a powerful 1/2 horsepower motor with a built-in regulator which allows convenient speed control during operation.



Safety Instructions

The following instructions are furnished as general guidelines for use of your pneumatic tool. They cannot comprehensively cover all possible or conceivable uses of the subject tool. For additional information on the safe use of air tools, we advise you to obtain a copy of ANSI B186.1 Safety Code for Portable Air Tools, available from the following source:

American National Standards Institute, Inc.
11 West 42nd Street
New York, NY 10036.

The use of the word "shall" in the following instructions, indicates that adherence to the particular requirement is necessary to conform to ANSI B186.1.

Tool Application and Usage

Portable tools shall be used only for the purposes intended in their design and within the capacity for which they were intended and rated. It shall be the tool owner's and/or employer's responsibility to instruct each operator in the safe use of the tool. Tools shall not be used without guards and safety

devices as furnished by the manufacturer. Where an air tool is modified or altered, the modifier shall provide the safeguards to enable it to be safely used in the operations intended and to comply with any applicable provisions as contained in ANSI B186.1.

Tool Installation

Pressure regulators shall be used to limit air pressure to the rated pressure where the supply pressure exceeds the tool's rated pressure. Air hoses and lines shall be relieved of compressed air before being disconnected or disjoined, unless there is automatic valve closing protection at the joint being separated. Synthetic lubricants which can cause deterioration of elastomer seals shall not be used in air systems of air tools.

Tool Maintenance

It shall be the tool owner's and/or employer's responsibility to assure that tools are maintained in a safe operating condition. Tool maintenance and repair shall be performed by authorized, trained, competent personnel. Tools shall be disconnected from their compressed air supply before repairs are attempted. Repairs shall be consistent with the manufacturer's recommended procedures. Tool, hoses and fittings shall be replaced if unsuitable for safe operation. It shall be the tool owner's and/or employer's responsibility to keep required rating markings and warnings on the tool in legible condition.

Florida Pneumatic
A Division of Florida Pneumatic Manufacturing Corporation
851 Jupiter Park Lane, Jupiter, Florida 33458
Toll Free 1-800-327-9403


Read these instructions carefully before attempting to install, operate or service this Florida Pneumatic product. Failure to comply with the instructions could result in personal injury and/or property damage! Retain these instructions for future reference.

FPMC

Specifications

Pad size.....	3-1/2 X 6-3/8"
Free speed.....	6,500 RPM
Weight.....	4-3/4 lbs.
Length.....	6-3/8"
Average air consumption.....	4 CFM
Recommended hose size.....	3/8" I.D.
Air inlet size.....	1/4" NPT
Maximum operating pressure.....	90 psi

Parts Breakdown for FP866

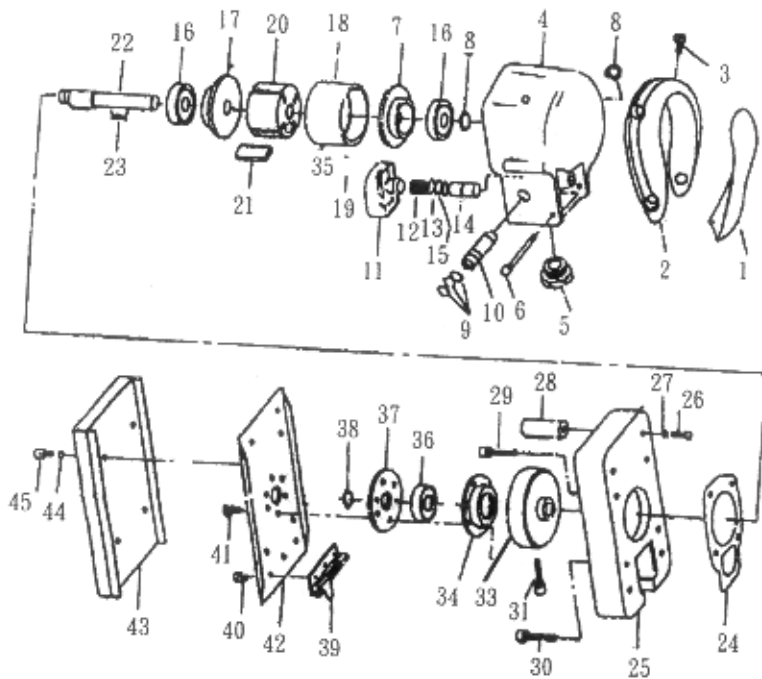

Replacement Parts for FP866

Ref.	Description	Part #	Ref.	Description	Part #
1	Lever	9102101	23	Key	9102123
2	Rubber grip with Metal Strip	9102102	24	Gasket	9102124
3	Grip screw (4)	9102103	25	Base	9102125
4	Body	9102104	26	Mount Screw (4)	9102126
5	Inlet Screw	9102105	27	Spring Washer (4)	9102127
6	Lever pin	9102106	28	Rubber Post (4)	9102128
7	End Plate	9102107	29	Cap Screw (2)	9102129
8	Retaining Ring (2)	9102108	30	Cap Screw (2)	9102130
9	O-Ring (3)	9102109	31	Balancer Lock Screw	9102130
10	Speed Regulator	9102110	33	Crank Shaft	9102133
11	Muffler	9102111	34	Bearing Housing	9102134
12	Spring	9102112	35	Ball	9102135
13	O-Ring	9102113	36	Ball Bearing	9102136
14	Plunger	9102114	37	Bearing Plate	9102137
15	O-Ring	9102115	38	Retaining Ring	9102138
16	Ball Bearing (2)	9102116	39	Paper Clamp (2)	9102139
17	End Plate	9102117	40	Clamp Screw	9102140
18	Cylinder	9102118	41	Bearing Hang Screw	9102141
19	O-Ring	9102119	42	Shoe Plate	9102142
20	Rotor	9102120	43	Sanding Pad	9102143
21	Rotor Blade (4)	9102121	44	Lock Washer (4)	9102144
22	Rotor Shaft	9102122	45	Mount Screw (4)	9102145

Limited Warranty

Florida Pneumatic warrants its tools to be free from defects in material and workmanship for two year from the date of purchase. This warranty does not apply to tools which have been abused, misused, modified or repaired by someone other than Florida Pneumatic or its authorized service centers. If a Florida Pneumatic proves defective in material of workmanship within two year after purchase, return it to any authorized service center or to Florida Pneumatic, freight prepaid. Please enclose your name, address and adequate proof of purchase date with a brief description of the defect. Florida Pneumatic will, at its option, repair or replace defective tools, free of charge. Repairs or replacements are warranted as described above for the remainder of the warranty period. Florida Pneumatic's sole liability and your exclusive remedy under this warranty is limited to repair or replacement of the defective tool. There are no other warranties expressed or implied and Florida Pneumatic shall not be liable for incidental, consequential or special damages, or any other damages, costs or expense of repair or replacement as described above.