

PLEASE READ AND FOLLOW ALL WARNINGS



UT8702

10 MM BELT SANDER

Read Operating Instructions

Always become familiar with all the instructions and warnings before operating any power tool.



Always Wear Approved Eye Protection

Impact resistant eye protection should meet or exceed the standards as set forth in the United States ANSI Z87.1, Occupational and Educational Eye and Face Protection. Look for the marking Z87.1 on your eye protection to insure that it is an approved style. For further information, ANSI Z87.1, Occupational and Educational Eye and Face Protection, is available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.



Hearing Protection is Recommended

Hearing protection should be used when the noise level exposure equals or exceeds an 8 hour time-weighted average sound level of 85 dBA. Process noise, reflective surfaces, other tools being operated nearby, all add to the noise level present in your work area. If you are unable to determine your noise level exposure, we recommend the use of hearing protection.



Avoid Prolonged Exposure to Vibration

Tools can vibrate during use. Prolonged exposure to vibration or very repetitive hand and arm movements, can cause injury. Stop using any tool if discomfort, tingling feeling or pain occurs. You should consult your physician before resuming use of the tool.



90 PSIG Maximum

This tool is designed to operate at


an air pressure of 90 pounds per square inch gauge pressure (90 PSIG) maximum, at the tool. Use of higher air pressure can, and may cause injury. Also, the use of higher air pressure places the internal components under loads and stresses they were not designed for, causing premature failure. The air supply should be clean and dry, preferably lubricated. For best results, drain the moisture from your compressor daily.

WARNING:

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as those dust masks that are specially designed to filter out microscopic particles.

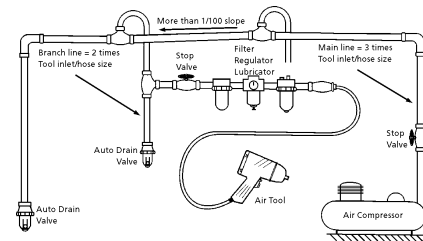

Description

Universal Tool Multi-Angle Belt Sander is designed for hard-to-reach corners, contours, and hard-to-finish surfaces. Used to sand, grind, and finish aluminum, steel, cast iron, plywood, plastic and stone. **Please note : Multi-Angle Belt Sanders are not designed for sanding directly on the front roller.**



Safety Instructions

The following instructions are furnished as general guidelines for use of your pneumatic tool. They cannot comprehensively cover all possible or conceivable uses of the subject tool. For additional information on the safe use of air tools, we advise you to obtain a copy of ANSI B186.1 Safety Code for Portable Air Tools, available from the following source:

American National Standards Institute, Inc.
11 West 42nd Street
New York, NY 10036.

The use of the word "shall" in the following instructions, indicates that adherence to the particular requirement is necessary to conform to ANSI B186.1.

Tool Application and Usage

Portable tools shall be used only for the purposes intended in their design and within the capacity for which they were intended and rated. It shall be the tool owner's and/or employer's responsibility to instruct each operator in the safe use of the tool. Tools shall not be used without guards and safety

devices as furnished by the manufacturer. Where an air tool is modified or altered, the modifier shall provide the safeguards to enable it to be safely used in the operations intended and to comply with any applicable provisions as contained in ANSI B186.1.

Tool Installation

Pressure regulators shall be used to limit air pressure to the rated pressure where the supply pressure exceeds the tool's rated pressure. Air hoses and lines shall be relieved of compressed air before being disconnected or disjoined, unless there is automatic valve closing protection at the joint being separated. Synthetic lubricants which can cause deterioration of elastomer seals shall not be used in air systems of air tools.

Tool Maintenance

It shall be the tool owner's and/or employer's responsibility to assure that tools are maintained in a safe operating condition. Tool maintenance and repair shall be performed by authorized, trained, competent personnel. Tools shall be disconnected from their compressed air supply before repairs are attempted. Repairs shall be consistent with the manufacturer's recommended procedures. Tool, hoses and fittings shall be replaced if unsuitable for safe operation. It shall be the tool owner's and/or employer's responsibility to keep required rating markings and warnings on the tool in legible condition.


Universal Tool
A Division of Florida Pneumatic Manufacturing Corporation
851 Jupiter Park Lane, Jupiter, Florida 33458
Toll Free 1-800-327-9403

Read these instructions carefully before attempting to install, operate or service this Florida Pneumatic product. Failure to comply with the instructions could result in personal injury and/or property damage! Retain these instructions for future reference.

FPMC

PL0349

Belt width10mm
 Belt size.....3/8 x 13"
 Speed.....16,000 RPM
 Weight.....1¾ lbs.
 Overall length.....11"
 Average air consumption.....14 CFM
 Air inlet.....1/4" NPT
 Recommended hose size.....3/8" I.D. 3/8" I.D.
 Maximum air pressure.....90 PSI

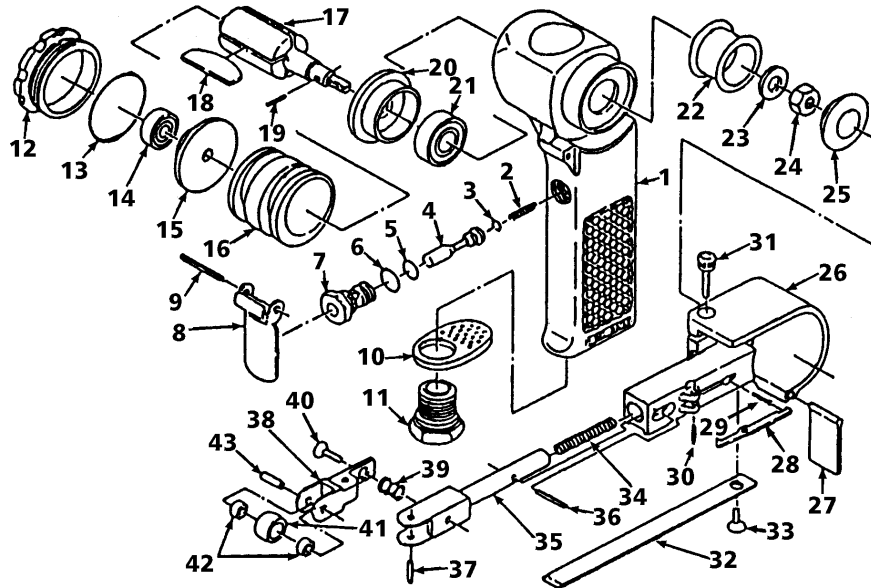Parts Breakdown for UT8702

Replacement Parts for UT8702

Ref.	Description	Part #	Ref.	Description	Part #
1	Motor housing	8900513	29	Spring	8900490
2	Spring	8900490	30	Roll pin	8900032
3	O-Ring	81008173	31	Adjust screw (swivel)	81007854
4	Valve stem	8900051	32	Shoe	8900531
5	O-Ring	8729088	33	Screw	8900532
6	O-Ring	8729091	34	Tension spring	8900533
7	Valve body	8900053	35	Tension arm	8900534
8	Throttle lever	8900514	36	Roll pin	8900535
9	Lever pin	8729167	37	Roll pin	8900536
10	Deflector	8900515	38	Adjust arm	8900537
11	Air inlet	8900516	39	Adjust spring	8900538
12	Motor nut	8900517	40	Adjust screw (alignment)	8900532
13	O-Ring	8729018	41	Idler pulley	8900539
14	Ball bearing	8729012	42	Ball bearing (2)	8900540
15	Rear plate	8900518	43	Pulley pin	8900541
16	Cylinder	8900519	Δ	Allen wrench for No. 31	8900542
17	Rotor	8900520			
18	Rotor blade (4)	8900521			
19	Roll pin	8900522			
20	Front plate	8900523			
21	Ball bearing	8729113			
22	Drive pulley	8900524			
23	Washer	8900525			
24	Lock nut	8900526			
25	Pulley cap	8900527			
26	Wheel cover	8900528			
27	Apron	8900529			
28	Stopper	8900530			

SANDING BELTS FOR THE UT8702
 3/8" x 13" 60 Grit belts (10) 801060A
 3/8" x 13" 80 Grit belts (10) 801080A
 3/8" x 13" 120 Grit belts (10) 801120A

Limited Warranty

Universal Tool warrants its tools to be free from defects in material and workmanship for one year from the date of purchase. This warranty does not apply to tools which have been abused, misused, modified or repaired by someone other than Universal Tool or its authorized service centers. If a Universal Tool proves defective in material of workmanship within one year after purchase, return it to any authorized service center or to Universal Tool, freight prepaid. Please enclose your name, address and adequate proof of purchase date with a brief description of the defect. Universal Tool will, at its option, repair or replace defective tools, free of charge. Repairs or replacements are warranted as described above for the remainder of the warranty period. Universal Tool's sole liability and your exclusive remedy under this warranty is limited to repair or replacement of the defective tool. There are no other warranties expressed or implied and Universal Tool shall not be liable for incidental, consequential or special damages, or any other damages, costs or expense of repair or replacement as described above.